



Right Angle Connector Female / Male Thread, S-/T-Coding



Orientation of the Right Angle Connector:

- // Orientation adjustable in 45° increments
- // Due to variable direction of cable outlet mating usage in narrow conditions is possible

Tip: If the cable is oriented in the desired direction before leading it through the right angle body, following steps will be facilitated.



Setting the orientation:

- // Pull nut with notch over the nose
- // Secure handling of front assembly group is now possible
- // Adjust orientation as preferred
- // Shove front assembly group into right angle body
- // Slide nut away from the front assembly group, into the direction of the thread and tighten till stop



Finished!

- // Orientation of coding is as preferred
- // Nut of the front assembly group is fixed to the right angle body
- // The cable is secured by the strain relief insert and dome nut